
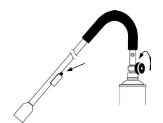








®

Usage Instructions	
	Gas Canister: The weed burner uses propane gas cylinders only with CGA-600 thread.
	Gas Canister Installation: Check that the gas burner's valve is closed prior to installation. Screw the gas canister to the gas burner by threading it on. Check for leaks, in any. Read the "Leak Check" section to igniting.
	Gas Canister Dismantling: Check that the valve is closed. Unscrew the gas canister from the gas burner.
	Leak Check: Spray soapy water on the area you want to examine. If bubbles start forming, there is a leak. Do not use the gas burner before sealing the leak.
	Ignition: Open the regulator. Press the ignition button until the gas ignites. Always hold the nozzle downward at an angle of 45 degrees and away from the body. Keep hands away from the tip do not start with matches or cigarette lighters.
	Flame Adjustments: Adjust the flame using the regulator knob.
	During Use: Apply caution when you use the gas burner dry spells. Such use may involve a significant fire hazard. Examine gas cylinder if are any problems with the gas supply during use. If there is still gas in the gas canister, it may be a good idea to clean the nozzle (see the "Nozzle Cleaning" section).
	After Use: Turn the regulator knob until it is completely closed. There may still be gas in the pipe after the regulator is closed, which is why the flame will not be put our right away.
	Storage: Always dismantle the gas canister after use. Store the gas burner in a cool and dry place. Do not expose the gas canister to direct sunlight. Do not expose the gas canister to temperatures above 50 C. Keep out of the reach of children.

User Warnings	
	Important: Read these instructions carefully before using the weed burner and save them for future reference. The supplier disclaims any liability for accidents, damage to equipment, or the line in connection with the incorrect use. The gas burner is produced according to EN521.
	Safety: Never install and dismantle the gas container indoors. This must always be done outdoors. NEVER use the gas burner in proximity to flammable fluids, flames, embers, cigarettes, etc. Always hold the nozzle downwards and at an angle of 45 degrees. Always let the burner cool down after use before stowing it away.
	ALWAYS KEEP THE GAS BURNER AT A SAFE DISTANCE FROM CHILDREN AND ANIMALS. ALWAYS APPLY CAUTION WHEN USING THE GAS BURNER.
	Risk of Burns. Wear flame retardant gloves during use.
	Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.

Remember this torch is a flammable product. Read and understand all warnings and usage instructions before operating. Failure to do so may result in an explosion or a fire that may cause property damage, serious personal injury or death.

This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. (CA Prop 65). Wash hands after use.

Nozzle Cleaning	
	Nozzle Cleaning: Unscrew the monitoring valve. Unscrew the nozzle itself with a shifting spanner. Clean the nozzle by blowing air into the hole. Install the nozzle again. Check that the nozzle is not leaking gas (see "Leak Check").
	Leak Check: Spray soapy water on the area you want to examine. If bubbles start forming, there is a leak. Do not use the gas burner before sealing the leak.