



Warning:



Must be installed by a certified electrician.

Consult your owners manual.

Disconnect power and release all pressure from system prior to performing maintenance or changing the pressure switch.



PRESSURE SWITCH

FOR USE ON MOST 175 PSI


AIR COMPRESSORS

FOUR PORT WITH 1/4" NPT

6-5615 instruction manual:

- 1) Install the lever type pressure switch correctly with technical data on product itself and wiring diagram;
- 2) Shift the lever to "AUTO" position when using;
- 3) To maintain the air compressor, the pressure switch will automatically shut off if the pressure reached 175PSI, and will also automatically start if the pressure is less than 130PSI;

Technical Data	6-5615
Type	Lever Type
Ports	Four (4)
Pressure Range	20-175 PSI
Pressure Setting	130-175 PSI
Differential	35-45 PSI
Phase	1 PH-3 PH
Max Rated Current	20 Amp (115 V)
Max Rated Voltage	230 V (@12 Amp)
Horse Power Rating	3 HP
Frequency	60 Hz
Max. Ambient Temp.	40°C/104°F
Protection Degree	IP20
Certification	CE, UL

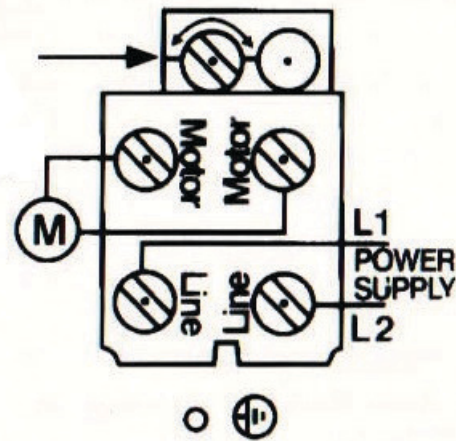

6-5615 wiring diagram

